



Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

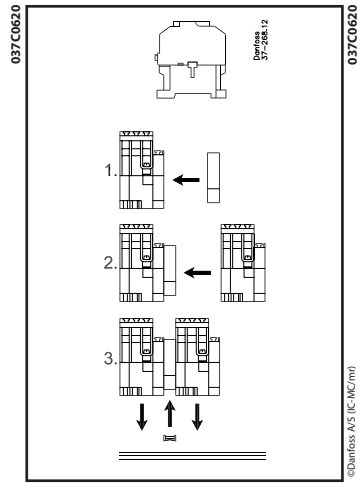


IC.PI.C10.B1.00 / 520B2369 10-2005

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

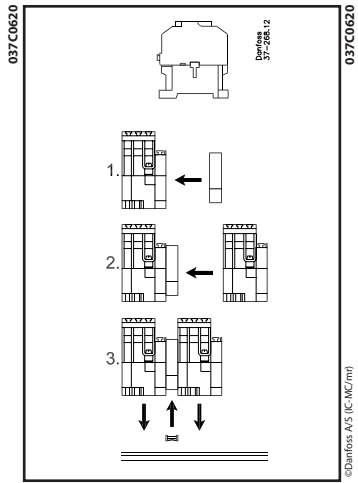


IC.PI.C10.B1.00 / 520B2369 10-2005

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

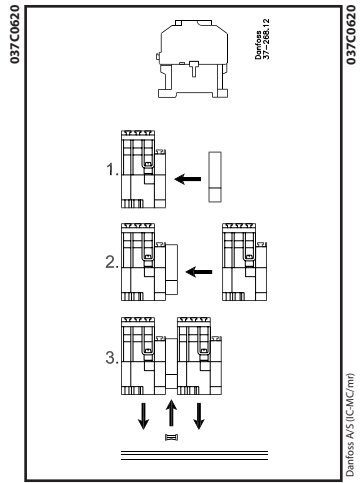


DKACT.PI.C00.K1.00 / 520B1426 11-2002

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

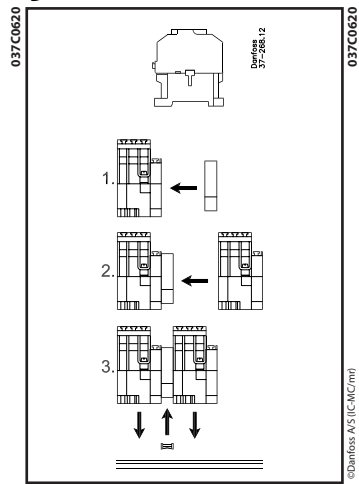


IC.PI.C10.B1.00 / 520B2369 10-2005

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

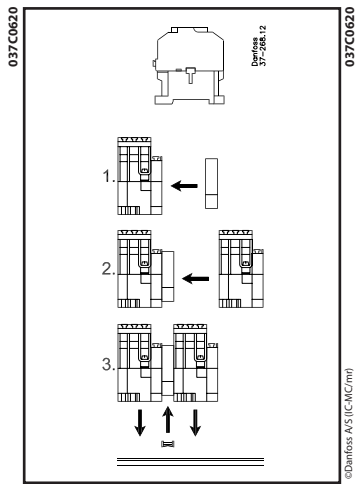


IC.PI.C10.B1.00 / 520B2369 10-2005

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

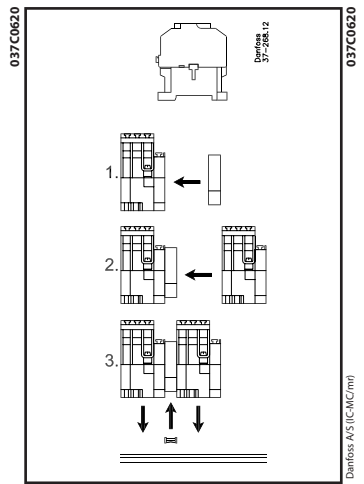


DKACT.PI.C00.K1.00 / 520B1426 11-2002

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

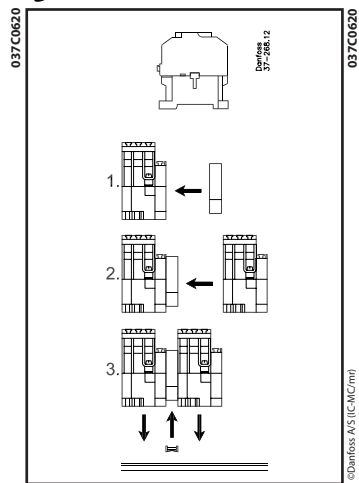


IC.PI.C10.B1.00 / 520B2369 10-2005

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

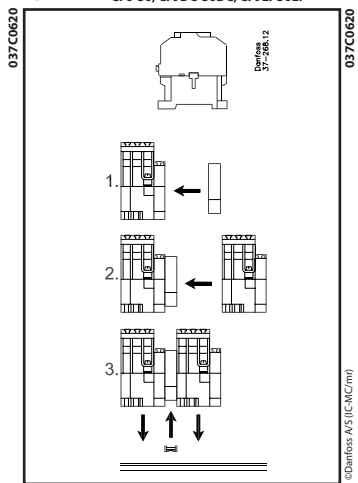

IC.PI.C10.B1.00 / 520B2369 10-2005

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

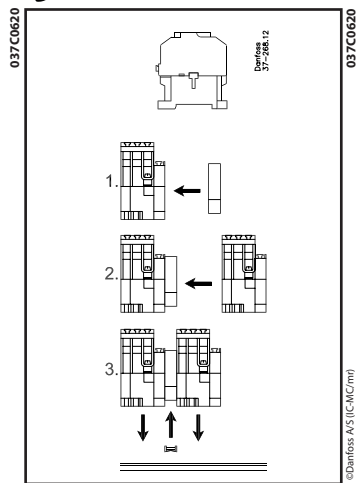

IC.PI.C10.B1.00 / 520B2369 10-2005